



The ideal waterproofing system for showers and wet areas.

SHOWER WATERPROOFING KIT



The Dunlop Shower Waterproofing Kit has been specially designed to make the job of waterproofing a shower, bathroom or wet area simple and easy. Each kit includes a primer, waterproof coating, joint tape and floor matting.



Waterproof



Kitchens & Bathrooms



Power showers



Sets in 24 hours



One 5kg kit covers 3.5m²



For your peace of mind

HOW TO WATERPROOF A SHOWER OR WET AREA:



Watch Now

PRIME



Apply the primer to clean dry wall areas (to the required height), and floor areas, using a paint brush, and leave until touch dry.

TAPE CORNERS & JOINTS



Apply a layer of DUNLOP WATERPROOF COATING with a paint brush to any area where there are joints including: corners of walls, along the tray or floor junctions, columns, pipe penetrations and outlets and any other cracks or joints in the background.

Cut the tape to the joint length and push into the wet layer of coating ensuring no voids are left beneath the tape. Form a continuous strip around the shower tray, slightly overlapping the top of the tray.

APPLY



Apply a second layer of coating over the tape and remaining wall areas using a brush, roller or trowel and leave to dry for 24 hours.

FINISH



Once the coating is dry, you can begin the tiling using a suitable adhesive such as DUNLOP CF-03 FLEXIBLE FAST SET TILE ADHESIVE.

APPLICATION AREAS:

- ✓ Walls & floors
- ✓ Interior areas
- ✓ Power showers
- ✓ Wet areas & bathrooms
- ✓ Underfloor heated screeds
- ✓ Electric undertile heating*

KIT CONTENTS:

- ✓ 500ml Primer
- ✓ 4.5kg waterproof coating
- ✓ 10m x 100mm tape
- ✓ 1m x 1m Floor matting

BACKGROUNDS:

- ✓ Concrete and cement/sand screeds
- ✓ Plaster (finishing plaster only)
- ✓ Plasterboard
- ✓ Timber overlay floors
- ✓ Tile backer boards
- ✓ Moisture stable timber boards

* After a DUNLOP Leveller has been applied and left to dry, such as DUNLOP LX-360 FIBRE LEVELLER.



Scan for product info, datasheets, and videos.

Dunlop Sales: 01782 591160
Dunlop Technical: 01782 591120
info@dunloptrade.com
www.dunloptrade.com

Who cares about tanking bathrooms...



"...The tile adhesive and grout are waterproof anyway."


They said.

It's a common misconception that tiles, tile adhesives and grouts give you all the waterproof protection you need... They don't! Cementitious adhesives and grouts are porous in nature, so over time water will pass through into the underlying substrate leading to damp and mould issues, de-bonding tiles and even damage to adjoining rooms.

Do I really need a tanking solution?

If you're interested in following the British Standard Institute (BSI) guidelines you should. Under the latest revision in clause 6.1.1.3, it states that wet areas should be protected with a suitable propriety tanking membrane system. Furthermore, the costs incurred from some types of water leaks may not be covered by the home insurance policy.

A wet area is any wetroom, bathroom, shower area, steam room or any other area subject to frequent water contact. This includes walls and floors in a wetroom, walls within a shower cubicle and walls around a bath or shower.

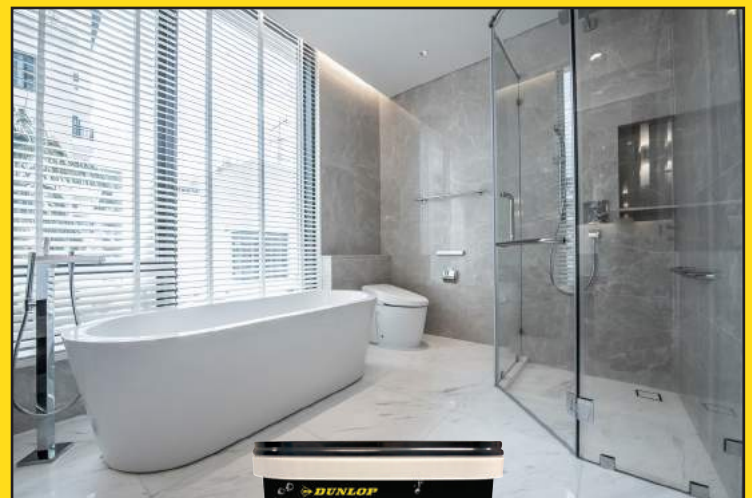

Protect the substrate and surrounding rooms with Dunlop Shower Waterproofing Kit, and you'll protect the home-owner, your reputation, and your wallet!

