


SMALL FORMAT CERAMIC WALL TILING (<300x300mm)

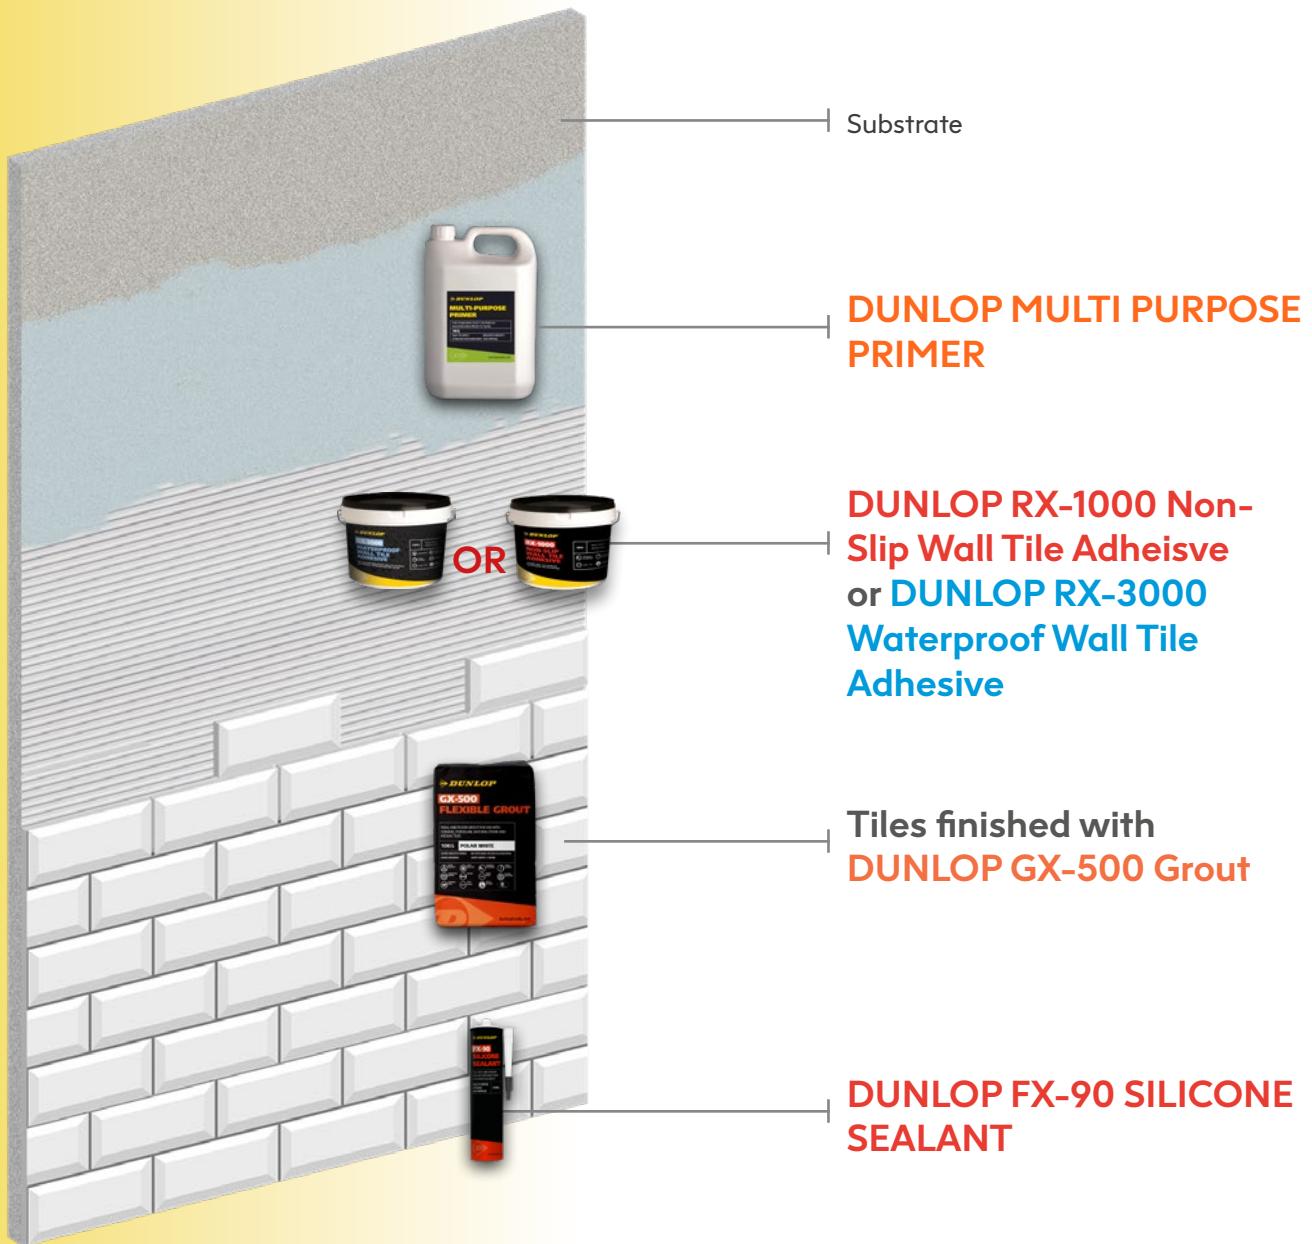

JOB DUN RIGHT

01 PREPARE & PRIME

Ensure the wall surface is clean, dry, and free from dust, grease, or loose material. Apply the **Primer** from the **Dunlop Shower Waterproofing Kit** using a roller or brush and leave until touch dry. For shiny plaster surfaces, brush thoroughly with a stiff bristled brush before priming.



02 WATERPOOF

Apply a layer of the **Waterproof Coating** from **Dunlop Shower Waterproofing Kit** with a brush to wall corners and joints, pressing the waterproofing tape into the wet coating. Apply a second layer of waterproof coating over the entire area to be tiled. Allow 24 hours drying time before proceeding with tiling.



03 APPLY

Choose either **DUNLOP RX-1000 NON-SLIP ADHESIVE** or **RX-3000 WATERPROOF ADHESIVE** for enhanced water resistance. Spread the adhesive over approximately 1m² using a suitable notched trowel, creating horizontal ribs. For wet areas, use a solid-bed notched trowel to ensure 100% coverage. Work within the open time of 20-30 minutes depending on the adhesive chosen.



04 FIX

Press tiles firmly into the adhesive with a slight twisting action, ensuring proper contact. Check adhesive coverage periodically by lifting tiles – aim for 100% coverage in wet areas. Use tile spacers to maintain consistent joint widths of at least 2mm between tiles. Clean excess adhesive from tile faces and joints immediately with a damp cloth.



05 FINISH

After allowing the adhesive to dry for 24 hours, apply **DUNLOP GX-500 FLEXIBLE GROUT**. Mix with water to a smooth paste and allow to stand for 2-3 minutes before remixing. Work in small areas, completely filling joints using a rubber squeegee or grout float. After about 15 minutes, clean excess grout diagonally across joints with a damp sponge. Polish tiles with a clean, dry cloth once grout has started to firm up. Seal movement joints with **Dunlop FX-90 Silicone** where needed, such as between the tiles and worktop.



Note: Always refer to the respective product datasheets before application.



JOB DUN RIGHT