


SHOWER AREA TILING

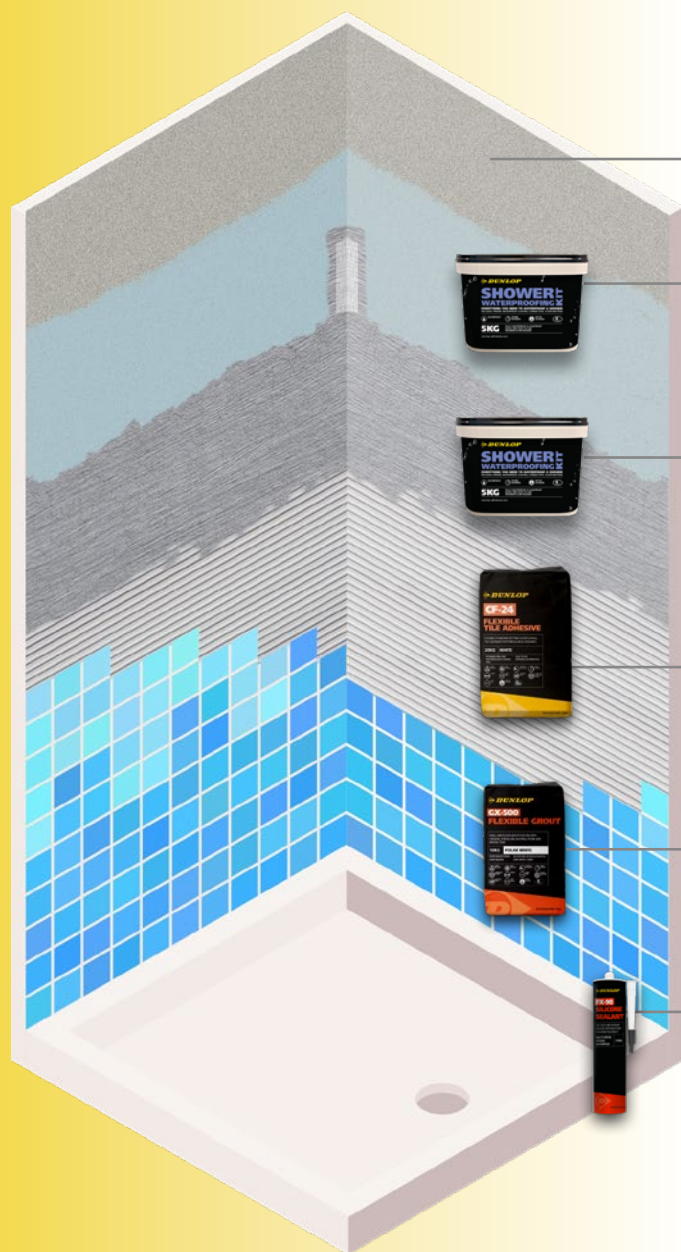

Substrate

PRIMER from
**DUNLOP SHOWER
WATERPROOFING KIT**

WATERPROOF COATING
from **DUNLOP SHOWER
WATERPROOFING KIT**

**DUNLOP CF-24 TILE
ADHESIVE**

Tiles finished with
DUNLOP GX-500 Grout

**DUNLOP FX-90 SILICONE
SEALANT**



JOB DUN RIGHT

01 PREPARE & PRIME

Ensure the wall surface is clean, dry, and free from dust, grease, or loose material. Apply the **Primer** from the **Dunlop Shower Waterproofing Kit** with a brush to the entire shower area including walls and floor. Ensure even coverage and allow to become touch dry before proceeding - this typically takes around 30 minutes.



02 WATERPOOF

Apply a layer of the **Waterproof Coating** from the **Dunlop Shower Waterproofing Kit** with a brush to all internal and external corners, wall-to-floor junctions, and around any pipe penetrations. Press Dunlop Waterproofing Tape into the wet coating, ensuring no voids are beneath and immediately apply a second coat over the top while the first is still wet. For the floor area, embed the matting into a fresh layer of coating and immediately apply a second coat over the top while the first is still wet. Complete the walls with a layer of waterproof coating and allow 24 hours drying time.



03 MIX & APPLY

Mix **Dunlop CF-24 Flexible Tile Adhesive** with clean water approximately 3 parts powder to 1 part water by volume (5.6 litres per 20kg bag). Allow mixed adhesive to stand for 1-2 minutes before remixing. Using a suitable solid-bed notched trowel, spread the adhesive over approximately 1m² or an area that can be tiled within 30 minutes. Create uniform ribbed lines to achieve maximum coverage.



04 FIX

Press tiles firmly into the adhesive with a twisting action, ensuring 100% solid bed coverage - particularly important in shower areas. Check coverage periodically by lifting tiles. For large format tiles, consider back-buttering to guarantee full contact. Maintain minimum 2mm joints between wall tiles and 3mm between floor tiles using spacers. Remove excess adhesive from tiles and joints immediately with a damp cloth.



05 FINISH

After allowing the adhesive to dry for 24 hours, apply **Dunlop GX-500 Flexible Grout**. Mix with water to a smooth paste and allow to stand for 2-3 minutes before remixing. Work in small areas, completely filling joints using a rubber squeegee or grout float. After about 15 minutes, clean excess grout diagonally across joints with a damp sponge. Polish tiles with a clean, dry cloth once grout has started to firm up. Seal movement joints with **Dunlop FX-90 Silicone** where needed, such as corners, around fixtures, and the shower tray.



Note: Always refer to the respective product datasheets before application.